


SETTING UP THE LABELLER



02 9452-3566

sales@getpacked.com.au

1. With the machine turned off
2. Open the Top Cover
3. Thread the labels as per diagram below there is also a copy is attached to the base of the machine

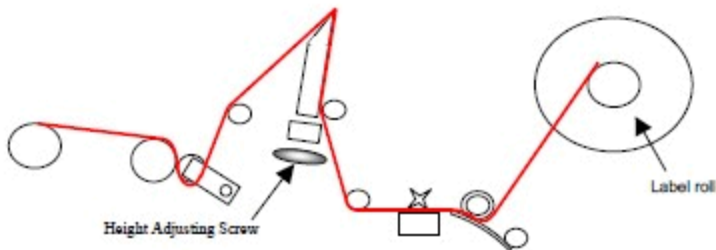

4. When label roll has been threaded, close the pinch roller
5. Then Close the Top Cover
6. Turn on power
7. Operate the applicator roller (as if a container was passed through the machine) this puts the label into it stop position
8. Test on Container and adjust Height of label to suit Job. The machine is now ready for use