




02 9452-3566

sales@getpacked.com.au

BANDING MACHINE OB-360N

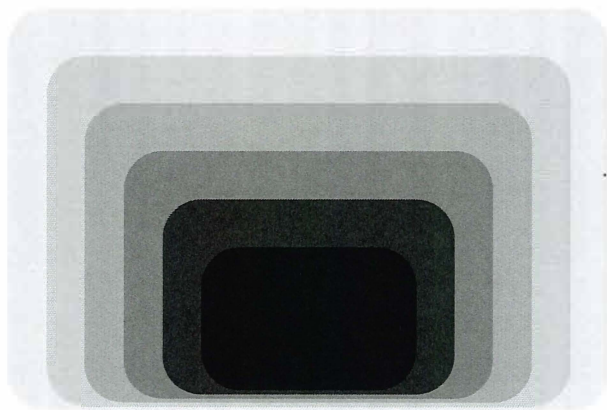

PARTS LIST



A family
owned
Australian
business


OB360N-1B-02001-00
2017-12


Sealing Unit
(Illust No. 1-4)


Arch Band Guide Unit
(Illust No. 5)


Electric Group
(Illust No.7)


Body Unit
(Illust No.6)

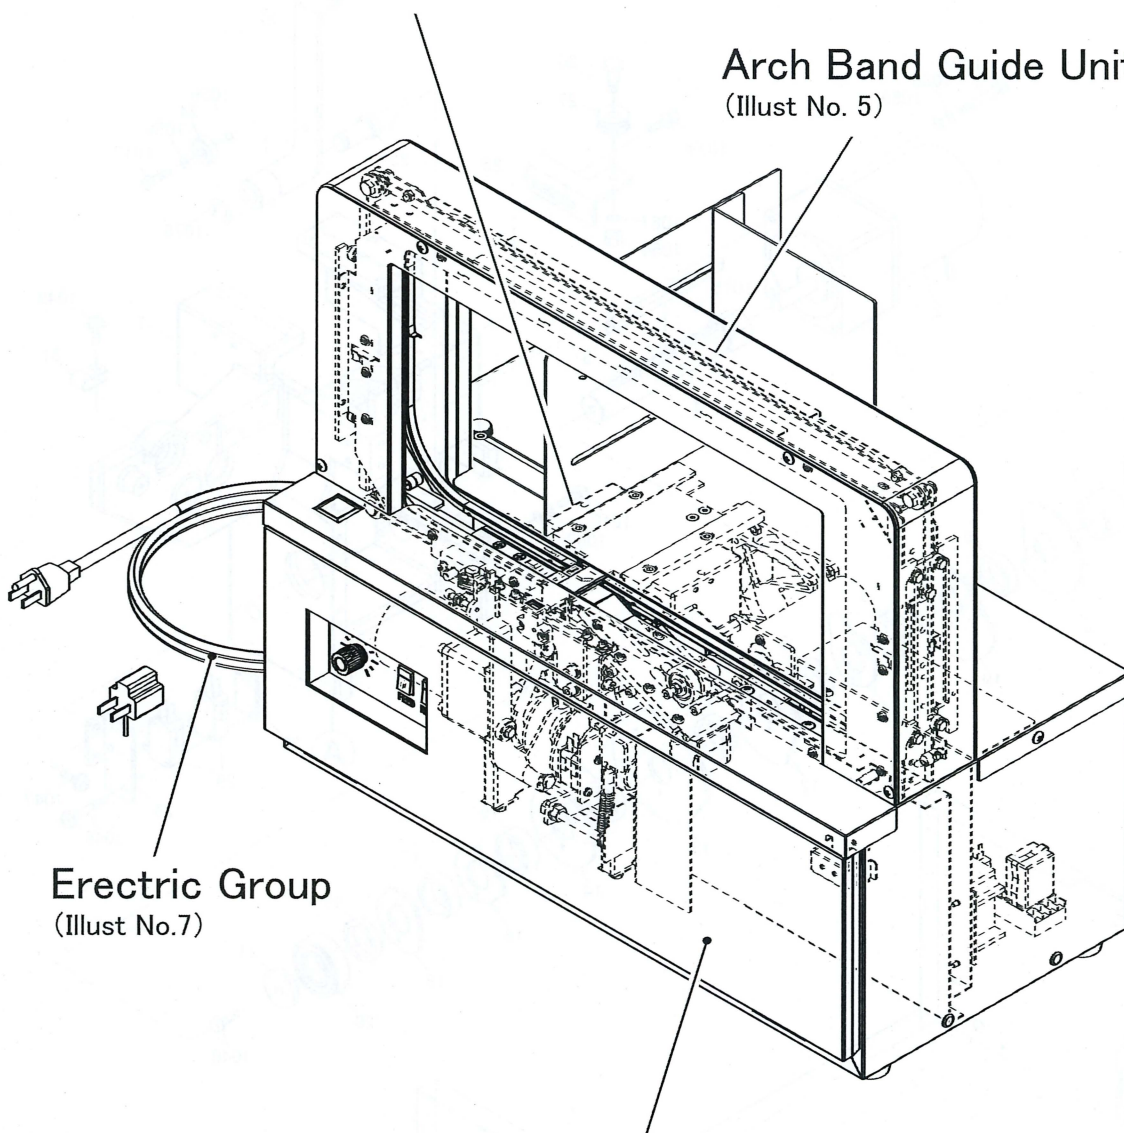


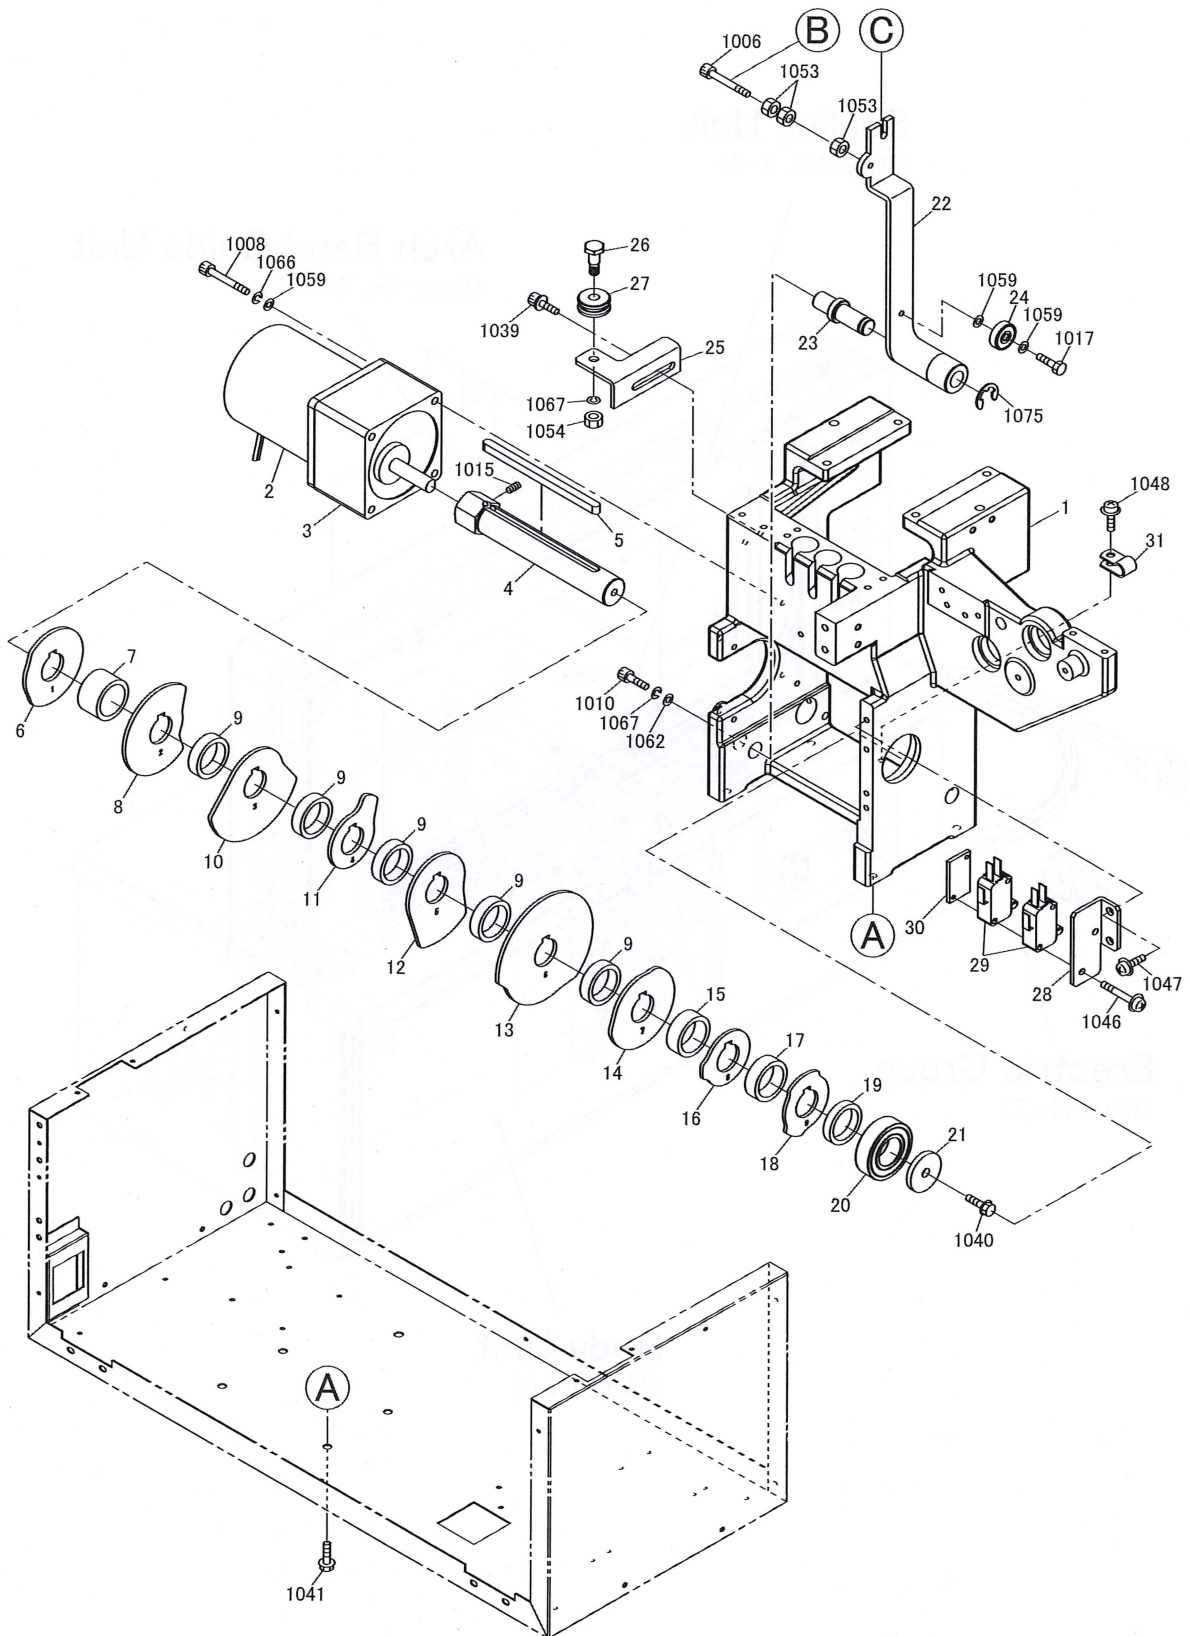


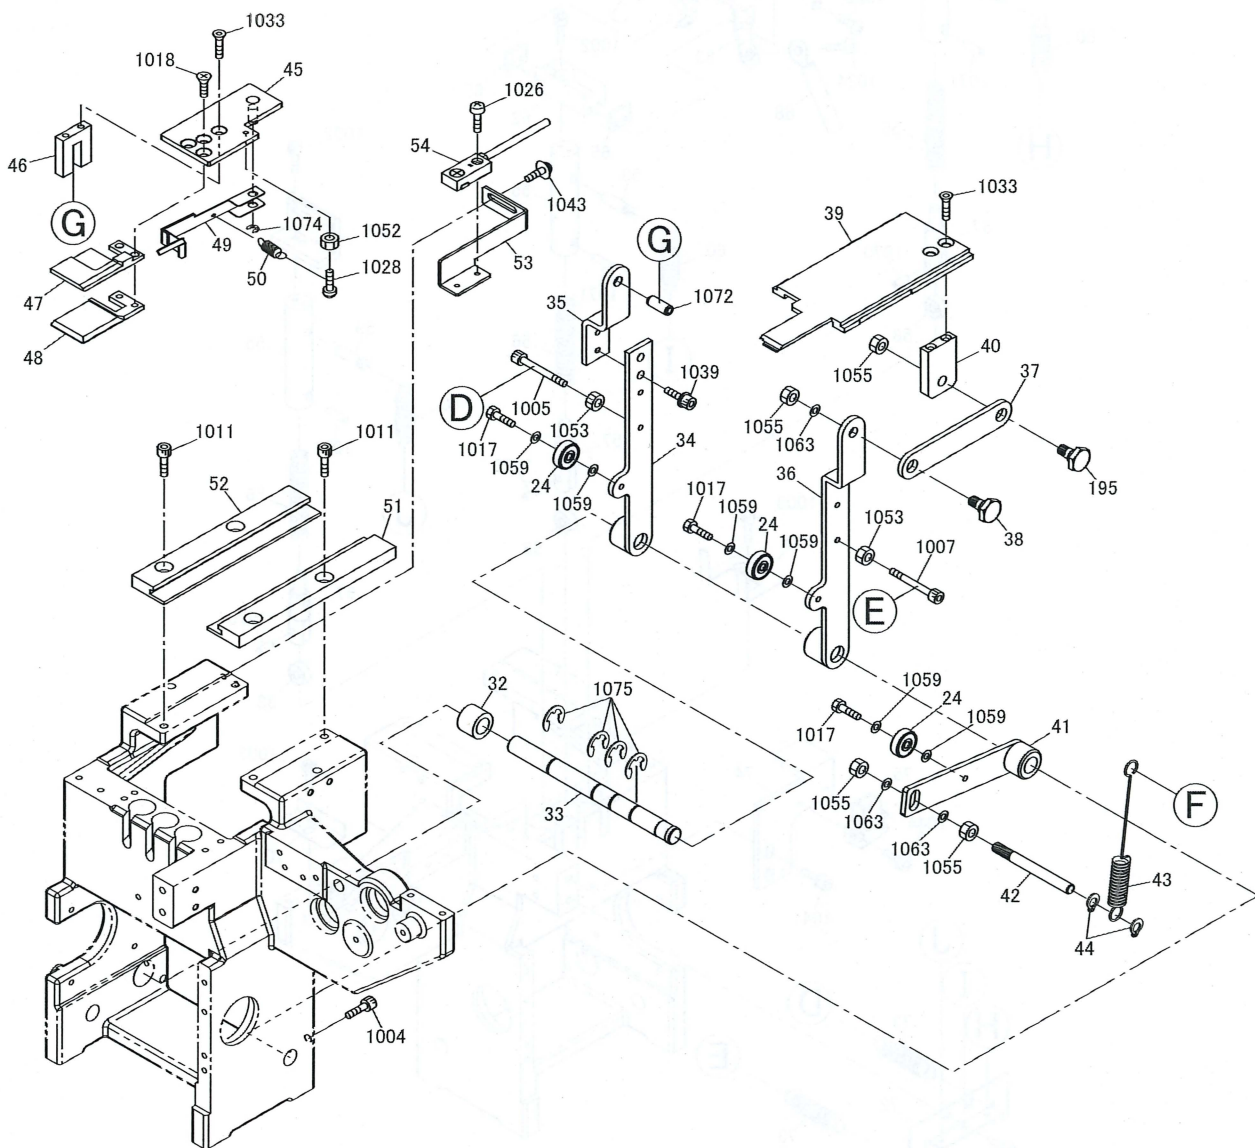

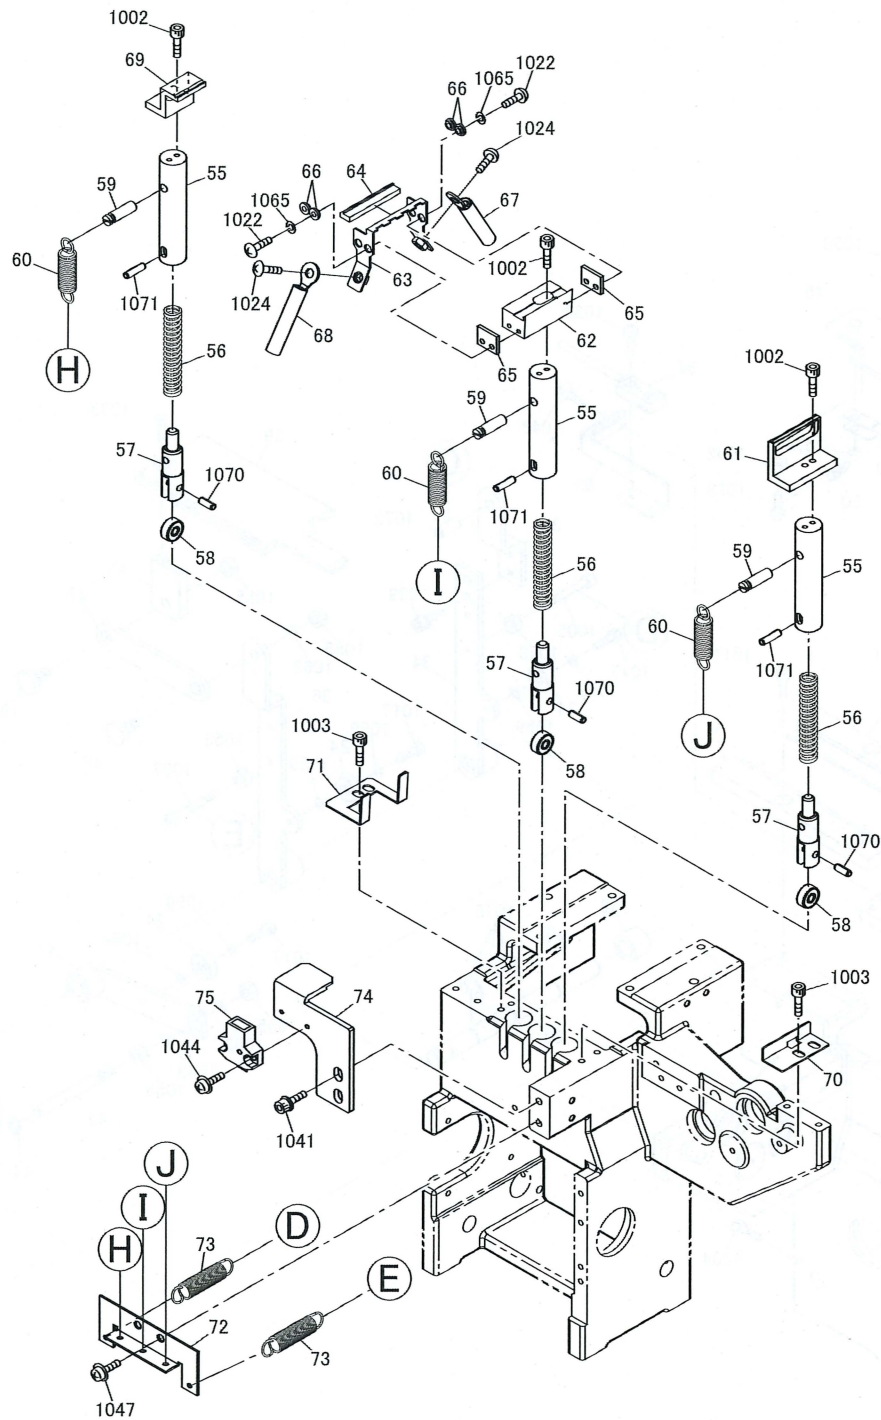

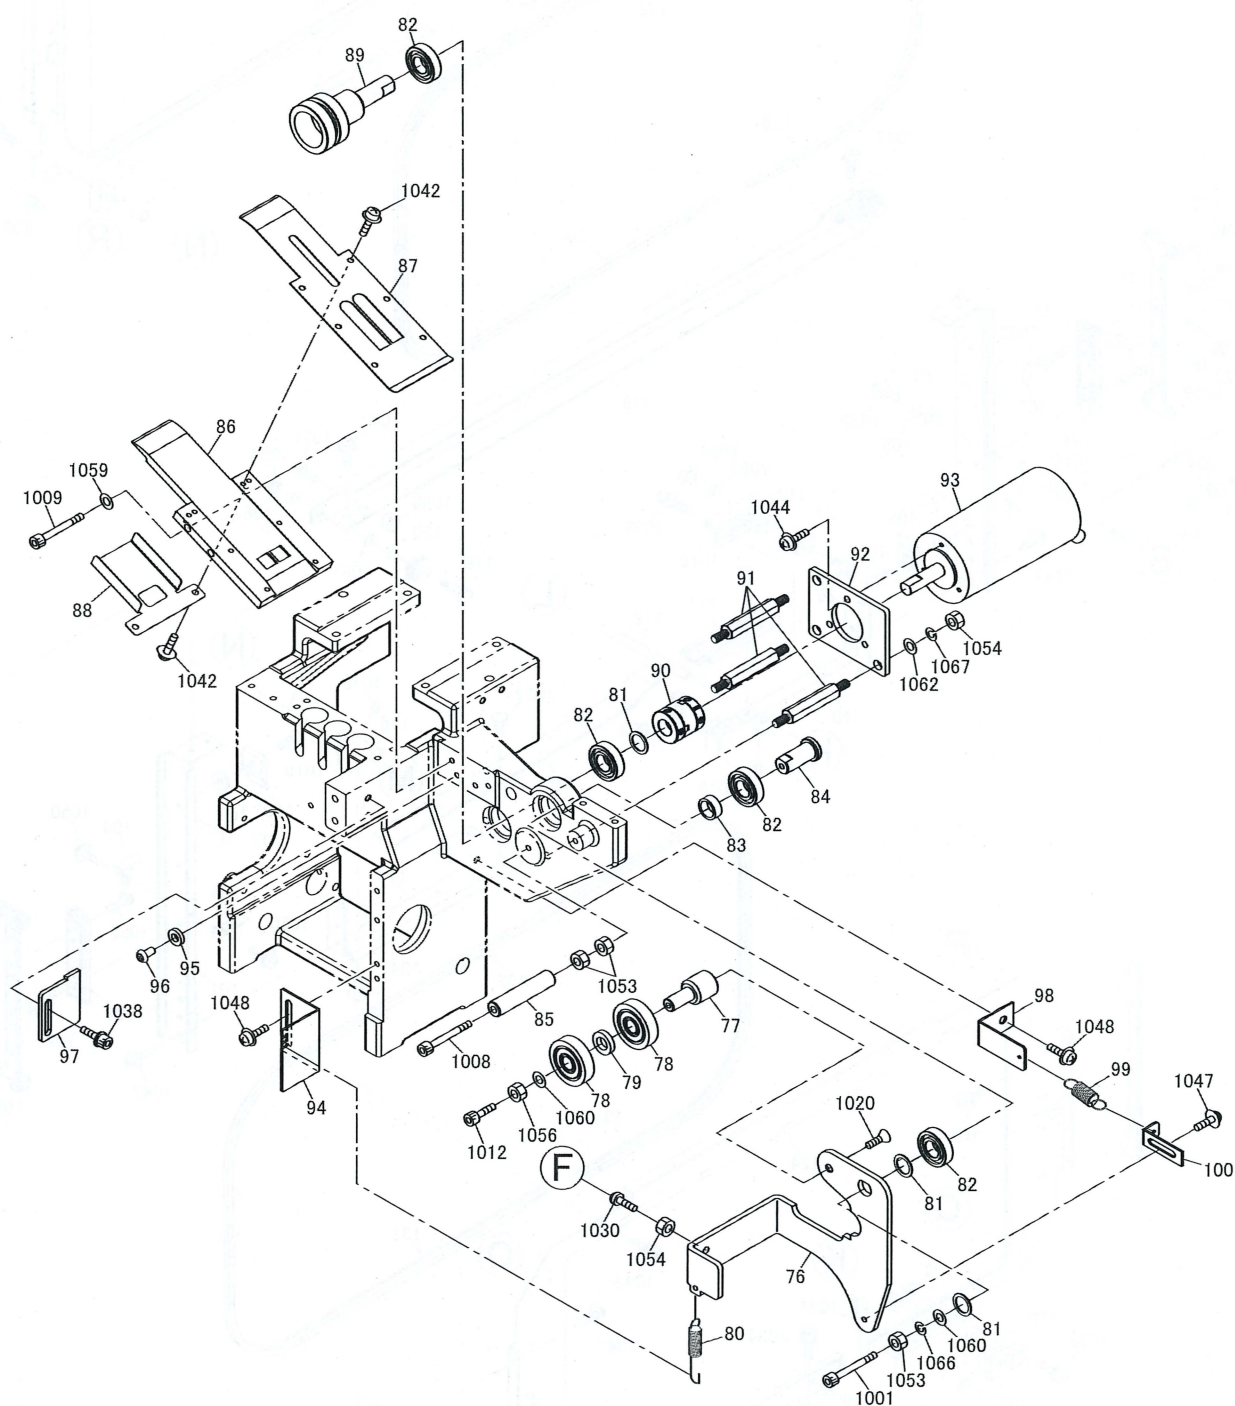

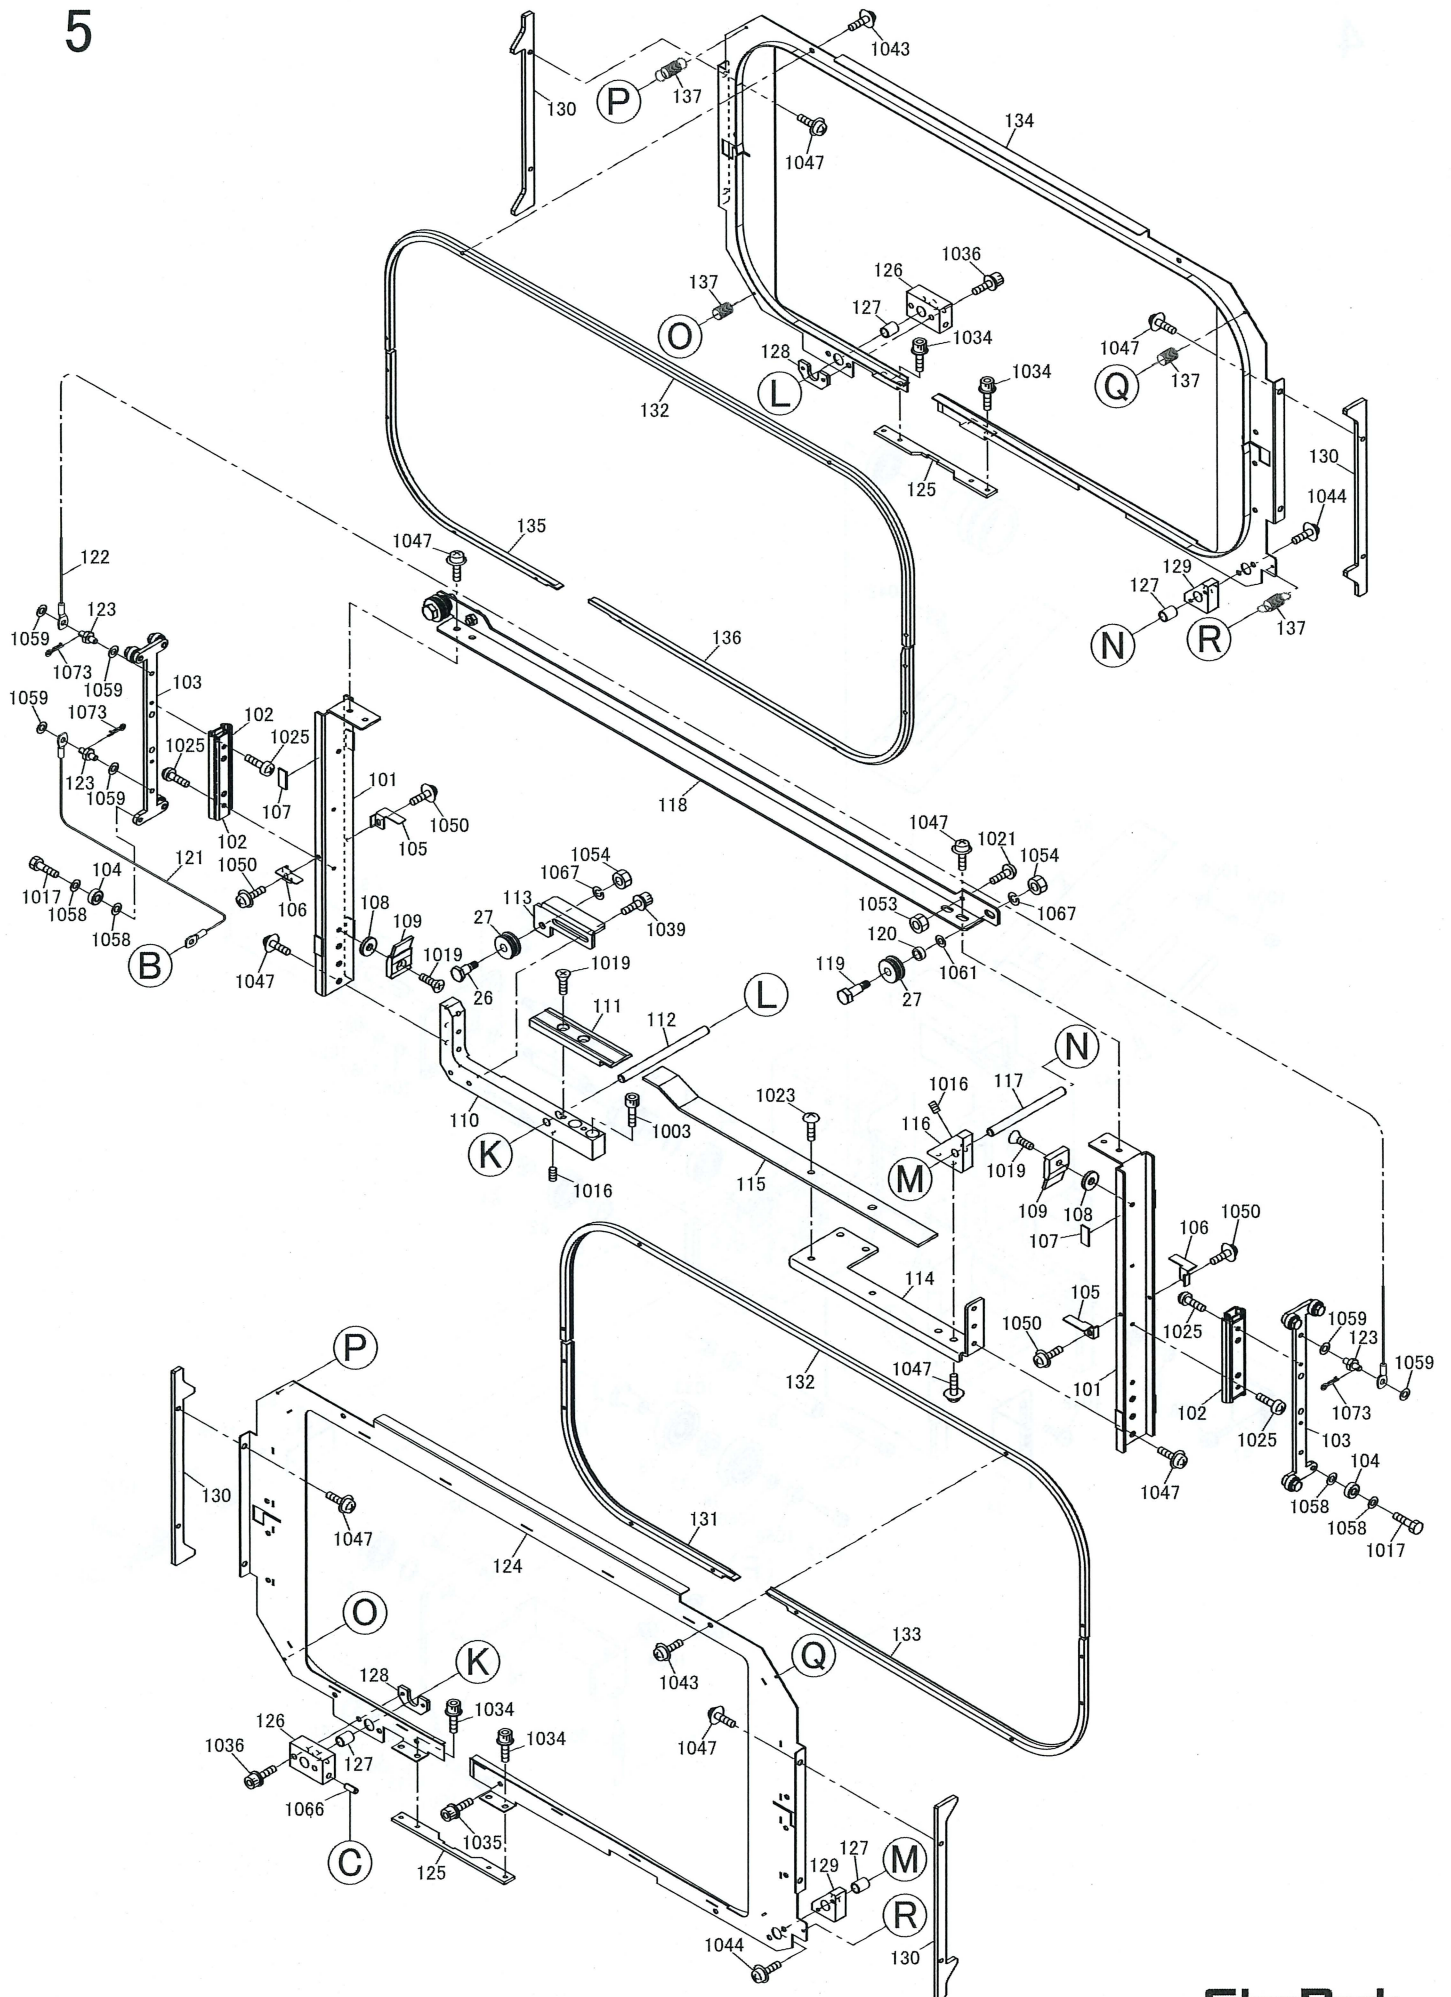

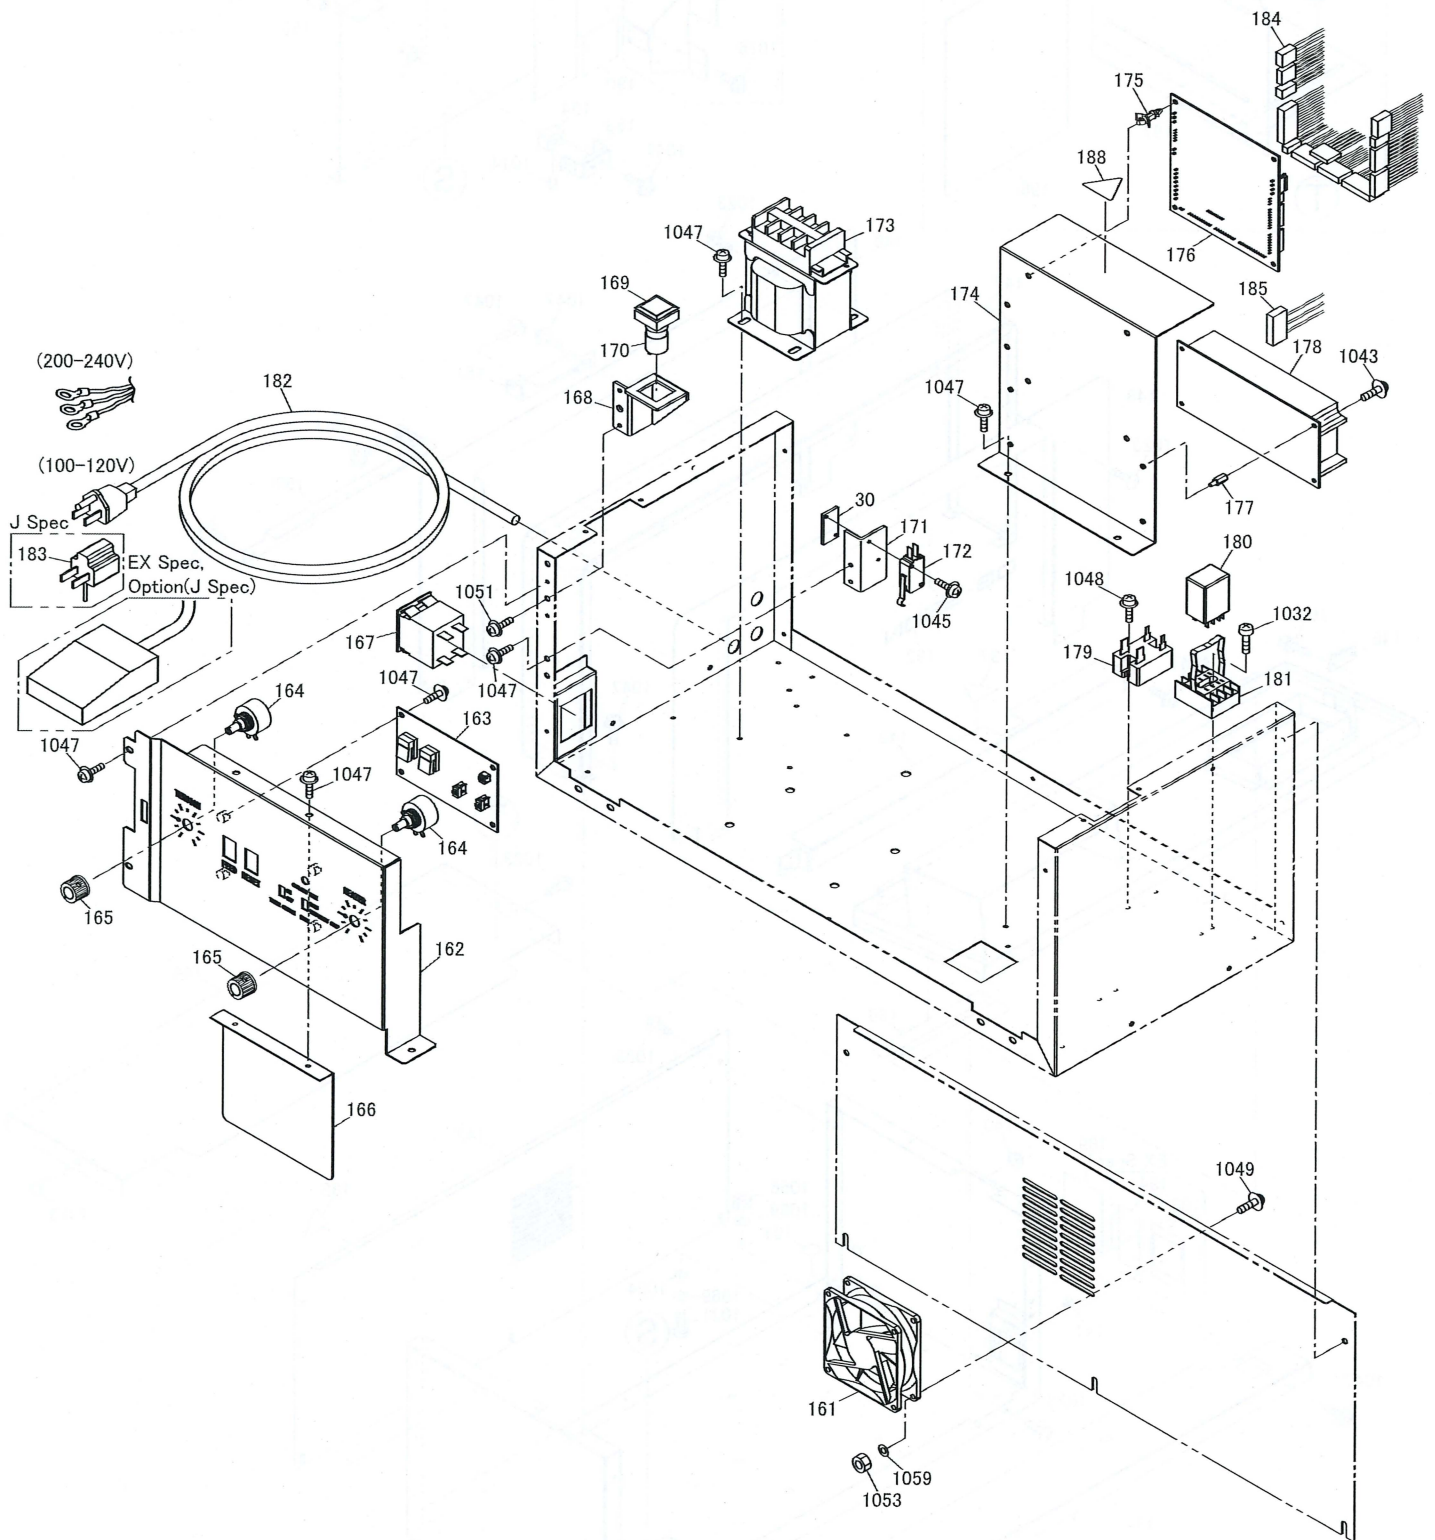

略称 Abbreviation	名称 Designation	形状 Appearance	略称 Abbreviation	名称 Designation	形状 Appearance
HBS	六角穴付きボルト Hexagon Socket Head Cap Bolt		HB-SP	座金組込六角ボルト Washer Assembled Hexagon Head Bolt	
HSS	六角穴付き止めねじ Hexagon Socket Set Screws		PMS-SP	座金組込十字穴付きなべ小ねじ Washer Assembled Cross Recessed Pan Head Screws	
HB	六角ボルト Hexagon Head Bolt		HN	六角ナット Hexagon Nuts	
FMS	十字穴付きサラ小ネジ Cross Recessed Flat Head Screws		HN-3	六角ナット(3種) Hexagon Nuts (Thin)	
TMS	十字穴付きトラス小ネジ Cross Recessed Truss Head Screws		PW	平座金 Plain Washers	
PMS	十字穴付きナベ小ネジ Cross Recessed Pan Head Screws		SW	バネ座金 Spring Washers	
HFS	六角穴付きサラ小ネジ Hexagon Socket Countersunk Head Screws		SPPIN	スプリングピン Spring Pin	
HBS-SP	座金組込六角穴付きボルト Washer Assembled Hexagon Socket Head Cap Bolt		E	E形止め輪 Retaining Rings E Type	

番号 Ref. No.	部品番号 Parts. No.	部品名称 Description	番号 Ref. No.	部品番号 Parts. No.	部品名称 Description	番号 Ref. No.	部品番号 Parts. No.	部品名称 Description
1001	0111-104045	HBS M4x45	1049	0036-104012	PMS-SP M4x12			
1002	0111-303008	HBS M3x8 Black Oxide	1050	0299-000090	PMS-SP M3x6 Small Washer			
1003	0111-304008	HBS M4x8 Black Oxide	1051	0299-000583	PMS-SP M4x8 Small Washer			
1004	0111-304018	HBS M4x18 Black Oxide	1052	0181-103001	HN M3(Class 1)			
1005	0111-304020	HBS M4x20 Black Oxide	1053	0181-104001	HN M4(Class 1)			
1006	0111-304025	HBS M4x25 Black Oxide	1054	0181-105001	HN M5(Class 1)			
1007	0111-304040	HBS M4x40 Black Oxide	1055	0181-106001	HN M6(Class 1)			
1008	0111-304055	HBS M4x55 Black Oxide	1056	0182-004001	HN M4(Class 1) Stainless			
1009	0111-304065	HBS M4x65 Black Oxide	1057	0311-030805	PW M3(3.4x8xt0.5)			
1010	0111-305010	HBS M5x10 Black Oxide	1058	0311-040808	PW M4(4.3x8xt0.8)			
1011	0111-305012	HBS M5x12 Black Oxide	1059	0311-041008	PW M4(4.5x10xt0.8)			
1012	0112-004016	HBS M4x16 Stainless	1060	0311-051220	PW M4(4.5x13xt2)			
1013	0121-303004	HSS M3x4 Cup Point Black Oxide	1061	0311-051210	PW M5(5.5x12xt1)			
1014	0121-304005	HSS M4x5 Cup Point Black Oxide	1062	0311-051220	PW M5(5.5x12xt2)			
1015	0121-304006	HSS M4x6 Cup Point Black Oxide	1063	0311-061310	PW M6(6.6x13xt1)			
1016	0121-304008	HSS M4x8 Cup Point Black Oxide	1064	0312-041008	PW M4 (4.5x10xt0.8) Stainless			
1017	0131-104010	HB M4x10	1065	0321-030407	SW M3(3.1x5.9xt0.7)			
1018	0141-104008	FMS M4x8	1066	0321-040810	SW M4(4.1x7.6xt1)			
1019	0141-104010	FMS M4x10	1067	0321-050913	SW M5(5.1x9.2xt1.3)			
1020	0141-105010	FMS M5x10	1068	0321-061215	SW M6(5.1x9.2xt1.3)			
1021	0151-104010	TMS M4x10	1069	0322-040810	SW M4 (4.1x7.6xt1) Stainless			
1022	0152-003006	TMS M3x6 Stainless	1070	0411-304010	Spring Pin φ 4x10			
1023	0152-004006	TMS M4x6 Stainless	1071	0411-304014	Spring Pin φ 4x14			
1024	0152-005006	TMS M5x6 Stainless	1072	0411-306015	Spring Pin φ 6x15			
1025	0161-103005	PMS M3x5	1073	0491-120400	Spring Pin φ 4			
1026	0161-103008	PMS M3x8	1074	0511-110306	Retaining Ring E-3			
1027	0161-103010	PMS M3x10	1075	0511-110808	Retaining Ring E-8			
1028	0161-103014	PMS M3x14	1076	0299-000590	PMS-SP M3x20 All Screws			
1029	0161-104010	PMS M4x10	1077					
1030	0161-105012	PMS M5x12	1078					
1031	0162-004016	PMS M4x16 Stainless	1079					
1032	0299-000581	PMS M3.5x10	1080					
1033	0251-104010	HFS M4x10	1081					
1034	0016-103006	HBS-SP M3x6	1082					
1035	0016-103007	HBS-SP M3x7	1083					
1036	0016-103020	HBS-SP M3x20	1084					
1037	0016-105015	HBS-SP M5x15	1085					
1038	0016-304008	HBS-SP M4x8 Black Oxide	1086					
1039	0016-304010	HBS-SP M4x10 Black Oxide	1087					
1040	0026-105010	HB-SP M5x10	1088					
1041	0026-105015	HB-SP M5x15	1089					
1042	0036-103006	PMS-SP M3x6	1090					
1043	0036-103008	PMS-SP M3x8	1091					
1044	0036-103010	PMS-SP M3x10	1092					
1045	0036-103016	PMS-SP M3x16	1093					
1046	0036-103028	PMS-SP M3x28	1094					
1047	0036-104008	PMS-SP M4x8	1095					
1048	0036-104010	PMS-SP M4x10	1096					

No.	Parts.No.	Description	Q'ty	Remarks	Illust No.
1	ND04W108A	Cam Bracket	1		1
2	0780-190071	DC Motor S6D06-24A	1	M1	1
3	0810-110291	Gear Head S6DA50B1-R23	1		1
4	ND04Z101A	Cam Shaft	1		1
5	0499-104090	Key 5x5x90	1		1
6	ND04Z103A	Opener Cam	1		1
7	ND04Z102A	Collar E	1		1
8	ND03Z111A	Separator Cam	1		1
9	ND03Z120A	Collar D	5		1
10	ND04Z105A	Rear Grip Cam	1		1
11	ND03Z113A	Slide Table Cam	1		1
12	ND04Z104A	Press Cam	1		1
13	ND03Z115A	Pressurization Cam	1		1
14	ND04Z106A	Front Grip Cam	1		1
15	ND03Z119A	Collar C	1		1
16	ND03Z117A	Cam(LS-3)	1		1
17	OB300111	Collar A	1		1
18	ND03Z118A	Cam(LS-4)	1		1
19	OB300112	Collar B	1		1
20	0611-026003	Ball Bearing 6003ZZ	1		1
21	7503-A	Washer	1		1
22	ND04Z306A	Opener Arm	1		1
23	ND04Z307A	Opener Shaft	1		1, 2
24	0611-020634	Ball Bearing 634ZZ	4		1
25	ND04Z606A	Roller Bracket A	1		1
26	12622	Pin	2		1, 5
27	ND01E613A	Roller	4		1, 5
28	ND04Z313A	Bracket(Limit Switch)	1		1
29	0750-110254	Micro Switch VX-015-1C23	2	LS3, 4	1
30	ND03Z709A	Plate Nut	2		1
31	0740-160035	Nylon Clip NK-4N	1		1
32	ND04Z304A	Coller(Fulcrum Shaft)	1		2
33	ND04Z305A	Fulcrum Shaft	1		2
34	ND03Z314A	Separator Arm A	1		2
35	ND03Z315A	Separator Arm B	1		2
36	ND03Z311A	Table Arm	1		2
37	ND03Z312A	Link	1		2
38	ND03Z313A	Link Pin	1		2
39	ND04Y303A	Slide Table	1		2
40	ND03Z306A	Table Hook	1		2
41	OB300508	Pressurization Arm	1		2
42	ND03Z512A	Spring Post	1		2
43	ND04Z320A	Fulcrum Spring	1		2
44	0890-530189	Stop Ring GS-6.0	2		2
45	ND04Z311A	Separator	1		2
46	ND03Z305A	Separator Hook	1		2
47	ND04Z312A	Center Guide(Upper)	1		2
48	ND04Z322A	Center Guide	1		2
49	ND04Z316A	Switch Bar	1		2
50	12309-A	Return Spring	1		2
51	ND04Z301A	Base Guide A	1		2
52	ND04Z302A	Base Guide B	1		2
53	ND04Z317A	Sensor Bracket	1		2
54	ND04Z908A	Proximity Switch	1	TL1	2
55	ND04Z204A	Plunger	3		3
56	ND03Z206A	Plunger Spring	3		3
57	ND04Z205A	Plunger Pin	3		3
58	0611-020624	Ball Bearing 624ZZ	3		3
59	7212	Spring Hook	3		3
60	50208	Return Spring	3		3
61	ND04Z203A	Front Griper	1		3
62	ND04Z201A	Head	1		3
63	ND04Y210A	Heater	1		3
64	ND04Z208A	Insulating Plate A	1		3
65	ND04Z209A	Insulating Plate B	2		3
66	ND04Z207A	Insulating Bush	4		3

No.	Parts.No.	Description	Q'ty	Remarks	Illust No.
67	ND03Z407A	Carbon Ribbon Wire A	1		3
68	ND03Z408A	Carbon Ribbon Wire B	1		3
69	ND04Z202A	Rear Griper	1		3
70	ND04Z206A	Front Griper Support	1		3
71	ND03Z406A	Press Head Support	1		3
72	ND1SE092A	Spring Hook	1		3
73	OB300316-B	Spring	2		3
74	ND04Z308A	Table Support	1		3
75	0750-120275	Micro Photoelectric Sensor PM2-LH10B	1	PH1	3
76	ND04Y319A	Rocker Arm	1		4
77	ND04Z321A	Rocker Shaft A	1		4
78	0610-060095	Rubber Mold Bearing MGA828ZZ	2		4
79	ND04Z505A	Rocker Collar	1		4
80	ND03Z514A	Spring	1		4
81	0890-321120	Washer WSSM14-10-1	3		4
82	0611-026900	Ball Bearing 6900ZZ	4		4
83	ND04Z501A	Collar(Bearing)	2		4
84	ND04Z310A	Fulcrum Pin(Rocker Arm)	1		4
85	ND03Z611A	Guide Roller	1		4
86	ND04Y601A	Inlet Guide	1		4
87	ND04Y615A	Guide Cover	1		4
88	ND04Z619A	Under Cover	1		4
89	ND04Z503A	Drive Roller	1		4
90	0810-160060	Coupling MOR-20-8-10	1		4
91	ND04Z504B	Spacer(Motor Bracket)	3		4
92	ND04Z502A	Motor Bracket	1		4
93	0780-190070	Brshless Motor HPS4-316B	1	M2	4
94	ND04Z309A	Spring Hook	1		4
95	ND04Z626A	Location Washer	1		4
96	0299-000573	Hexalobular Socket Button Head Cap Screw SRBS-M4-8	1		4
97	ND04Z625A	Location Plate	1		4
98	ND03Z515A	Spring Hook	1		4
99	ND04Z324A	Spring(Rocker Arm)	1		4
100	ND2SE050A	Spring Hook	1		4
101	ND04Y621A	Side Guide	2		5
102	0691-130036	Slide Rail TM-232-1	1set	One set with 2 pieces	5
103	ND04Y640A	Slide Base	2		5
104	0611-020694	Ball Bearing 694ZZ	8		5
105	ND04Z610A	Tape Stopper A	2		5
106	ND04Z611A	Tape Stopper B	2		5
107	ND03Z619A	Cushion Rubber	8		5
108	0890-321121	Washer WSSM14-5-2.5	2		5
109	ND04Z624A	Discharging Brush	2		5
110	ND04Y616A	Side Gide Bracket L	1		5
111	ND04Z639A	Band Rail L	1		5
112	ND04Z603A	Opener Shaft	1		5
113	ND04Z608A	Roller Bracket C	1		5
114	ND04Y618A	Side Guide Bracket R	1		5
115	ND04Y638A	Band Rail R	1		5
116	ND04Z612A	Corner Block	1		5
117	ND04Z602A	Corner Shaft	1		5
118	ND04Y622A	Top Guide	1		5
119	ND03Z632A	Roller Pin	2		5
120	ND03Z656A	Washer	2		5
121	ND04Z641A	Wire Rope B	1		5
122	ND03Z647A	Wire Rope C	1		5
123	ND04Z642A	Wire Hook	3		5
124	ND04W627A	Band Guide F1	1		5
125	ND03Z618A	Opener Bar	2		5
126	ND04Z604A	Opener Block A	2		5
127	0520-300071	Bush R-MLE0610	4		5
128	ND04Z623A	Plate Nut	2		5
129	ND04Z620A	Opener Block C	2		5
130	ND04Y617A	Plate Cam	4		5
131	ND04Y633A	Band Guide F2	1		5
132	ND04Y635A	Band Guide FR3	2		5

No.	Parts.No.	Description	Q'ty	Remarks	Illust No.
133	ND04Y636A	Band Guide F4	1		5
134	ND04W628A	Band Guide R1	1		5
135	ND04Y634A	Band Guide R2	1		5
136	ND04Y637A	Band Guide R4	1		5
137	22423	Spring	4		5
138	ND04W707A	Body Frame	1		6
139	0890-180164	Rubber Feet SA-9 RK-34	4		6
140	0890-220054	Grommet SA-10 NG-F	3		6
141	0740-230038	Canoe Clip 253M	4		6
142	ND04Y706A	Rear Cover	1		6
143	ND04Y708A	Top Plate, Front	1		6
144	ND04Y709A	Top Plate, Rear	1		6
145	ND04Y703A	Front Door	1		6
146	0890-160092	Magnet Catch MC-YS002	2		6
147	ND04Y701A	Arch	1		6
148	ND04Y702A	Arch Cover	2		6
149	ND04Y710A	Front Guide	1		6
150	ND04Y704A	Right Side Guide R	1		6
151	ND04Y705A	Left Side Guide R	1		6
152	ND04Y805A	Band Guide B	1		6
153	ND04Z803B	Paper Tube Holder	1		6
154	ND04Z806A	Holder Block	1		6
155	ND04Z801B	Collar(Brake)	1		6
156	ND04Z802B	Holder Pin	1		6
157	0611-020696	Ball Bearing 696ZZ	2		6
158	ND04Z804A	Brake Base	1	MB1	6
159	0770-140136	Electromagnet Brake 112-03-11-A-133	1		6
160	ND03Z650A	Discharging Brush	1		6
161	900-06-10160	Fan Motor	1	FM	7
162	ND04Y904A	Switch Panel	1		7
163	ND04Y907A	Switch Board	1	SW1, 2, PB1, 2,VR6	7
164	0770-220039	Volume RV 24YN20SB103 10k Ω	2	R5, 7	7
165	0710-180333	Knob K-4071	2		7
166	ND04Z905A	Cover	1		7
167	0730-110491	Circuit Protector IR-11-A2-5-1R(2P 5A)	1	Power Supply Switch	7
168	ND04Z902A	Switch Bracket	1		7
169	0710-140299	Illuminated Push Button Switch YB2-15CWSPG4-15ZC-JB	1	PB3	7
170	0710-140300	Socket AT-716	1		7
171	ND03Z708B	Mounting Plate(Safety Switch)	1	SSW	7
172	0750-110198	Micro Switch VX-014-1C23	1		7
173	0770-160329	Heater Transfomer 230-2-00615 REV.1	1	EX Spec	7
174	ND04Y901A	Board Mounting Plate	1		7
175	0740-230039	Support PCB-6L	4		7
176	0780-190038	Driver SD1039-E01	1	DRV1	7
177	0890-321112	Spacer SBD-03-10	4		7
178	0770-181111	Power Supply LFP100F-24-J1Y	1	DCPS1	7
179	0720-130123	Solid-State Relay AQJ116V	1	SSR1	7
180	0720-130148	Relay AP3222F(HC2-H-DC24V-F)	1	RY1	7
181	0720-180047	Terminal Block AP3822K(H2-SF-K)	1	RY1	7
182	4201-06-30110	Power Supply Cord	1	EX Spec 110-120V	7
	4201-06-30120	Power Supply Cord	1	EX Spec 200-240V	7
183					
184	ND04Y906A	Wire Harness 1	1		7
185	ND03Y906B	Wire Harness 2	1		7
186	0890-480338	Emblem	1		6
187	0890-480257	Label(Warning)	1		6
188	518-07-10360	Label(Warning)	2		6, 7
189	0890-480129	Label(Warning)	1	EX Spec	6
190	0890-480087	Label(Warning)	1	EX Spec	6
191	0890-480258	Label(Ground Mark)	3		7
192	4201-00-10110	Emblem	1		6
193	ND3SZ932A	Yellow Seal	1	EX Spec	6

[illegible]

Strapack Corporation
8-16-6 Ginza Chuo-ku Tokyo 104-0061 JAPAN

Web site : www.strapack.com
E-mail : info@strapack.com

☐ **Strapack Corporation International Department**
7F Ginza Strapack Building 8-16-6 Ginza Chuo-ku Tokyo 104-0061 JAPAN
Phone : +81 3 6278 1806
Fax : +81 3 6278 1807

☐ **Strapack, Inc.**
33508 Central Avenue, Union City, CA 94587-2097 U.S.A.
Phone : +1 510 475 6000
Fax : +1 510 475 6090

☐ **Strapack N.V./S.A.**
Uilenbaan 200 B-2160 Wommelgem Belgium
Phone : +32 (0) 3 355 1520
Fax : +32 (0) 3 355 1521

☐ **Gordian Strapping Ltd**
Brunel Road Houndmills Industrial Estate
Basingstoke Hampshire RG21 6XX United Kingdom
Phone : +44 (0) 1256 394400
Fax : +44 (0) 1256 394410