
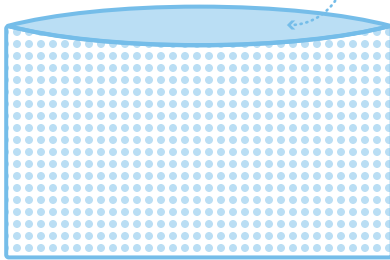
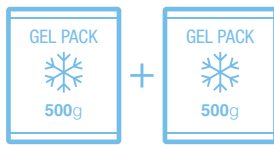


16+ HOURS

Using 2 x 500g Gel Ice Packs inside a Thermal Liner the temperature remained under 5 deg C for 16 hrs and 52 mins.

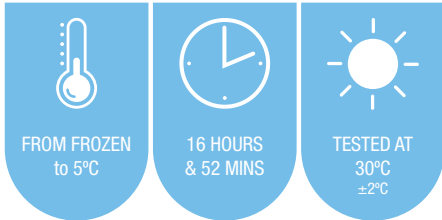


SANCELL THERMAL LINER

TEST PARAMETERS	
Ambient Temperature	30°C (+/- 2°C)
Specifications	2 x 500g Gel Packs inside a Thermal Liner.
RESULTS	
Start Temperature	-21°C
Finish Temperature	5°C
Lapsed Time	16 Hours & 53 Minutes

25+ HOURS

Using 2 x 750g Gel Ice Packs inside a Thermal Liner the temperature remained under 5 deg C for 25 hrs and 32 mins.



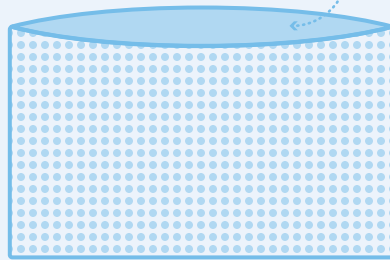


SANCELL THERMAL LINER

TEST PARAMETERS	
Ambient Temperature	30°C (+/- 2°C)
Specifications	2 x 750g Gel Packs inside a Thermal Liner.
RESULTS	
Start Temperature	-23°C
Finish Temperature	5°C
Lapsed Time	25 Hours & 32 Minutes

33+ HOURS

Using 2 x 1Kg Gel Ice Packs inside a Thermal Liner the temperature remained under 5 deg C for 33 hrs and 25 mins.

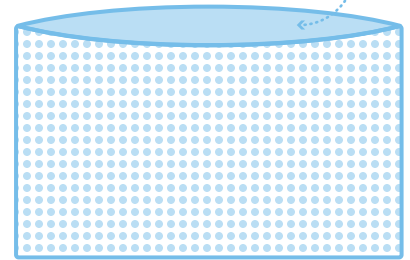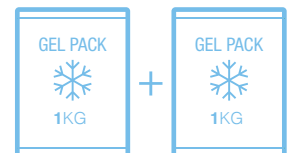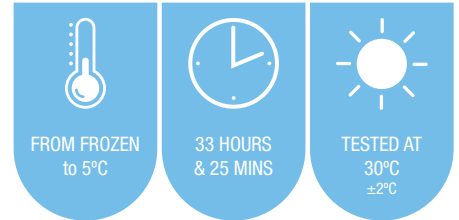

SANCELL THERMAL LINER

TEST PARAMETERS	
Ambient Temperature	30°C (+/- 2°C)
Specifications	2 x 1Kg Gel Packs inside a Thermal Liner.
RESULTS	
Start Temperature	-23°C
Finish Temperature	5°C
Lapsed Time	33 Hours & 25 Minutes

